

HOME DECORATORS *collection*[®]

BF-24875 PROVENCE BUFFETT 36"H×52"W×19"D

INV#08236


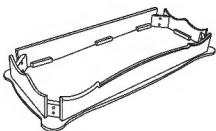
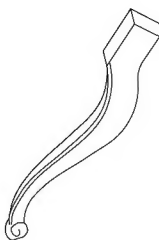
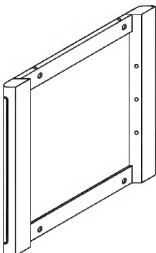
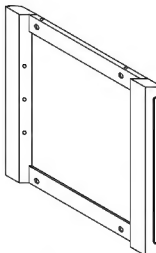
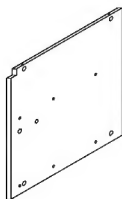
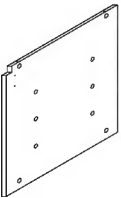
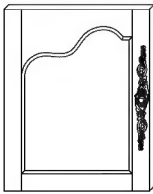
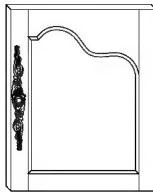

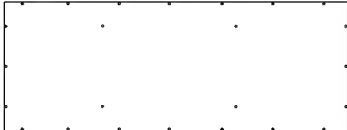
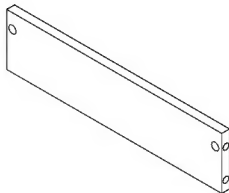
ASSEMBLY INSTRUCTIONS


Made In China




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.


PARTS LIST		
A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C  LEGS-4PCS
D  LEFT SIDE PANEL-1PC	E  RIGHT SIDE PANEL-1PC	F  LEFT STAND PANEL-1PC
G  RIGHT SIDE PANEL-1PC	H  LEFT DOOR-1PC	I  RIGHT DOOR-1PC
J  ADORNING PANEL-1PC	K  BACK PANEL-1PC	L  ACROSS PANEL-1PC

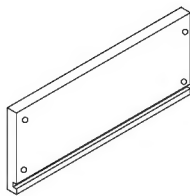M


LEFT
DRAWER PANEL SIDES-2PCS

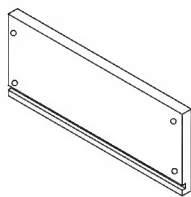N


RIGHT
DRAWER PANEL SIDES-2PCS

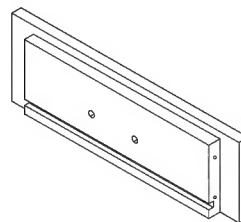O


DRAWER PANEL FRONTS-2PCS

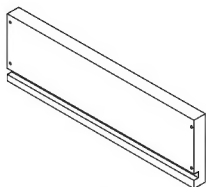P


DRAWER PANEL BACKS-2PCS

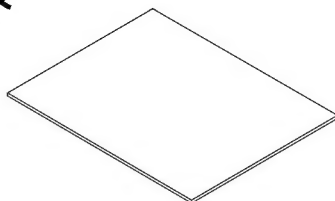Q


DRAWER PANEL BOTTOMS-2PCS

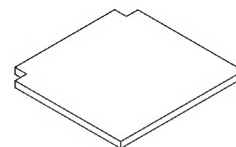R


SHELVES-2PCS

S

FEMALE MAGNETS-2PCS

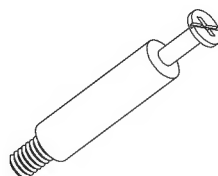T


CAM-BOLTS-20PCS

U


CAM-LOCKS-20PCS

V


CAM-TOOL-1PC

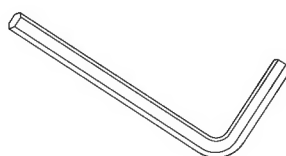W

ALLEN WRENCH-1PC

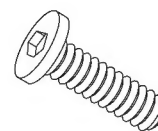X

SCREWS-8PCS

Y


HINGES-4PCS

Z


HANDLES-2PCS

A1


HANDLES-2PCS

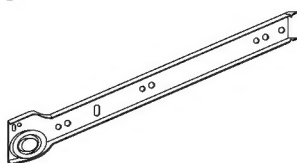B1




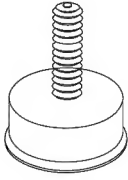







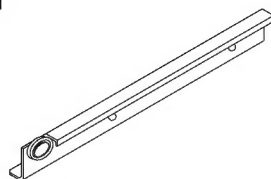

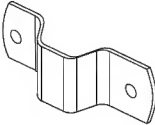




LEFT OUTER SLIDERS-2PCS

C1

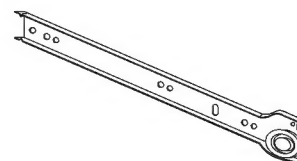LEFT INNER SLIDES-2PCS



D1

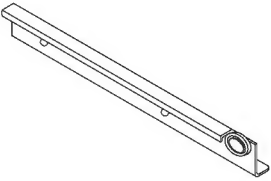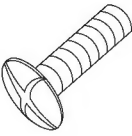RIGHT OUTER SLIDERS-2PCS

E1  RIGHT INNER SLIDES-2PCS	F1  SCREWS-6PCS	G1  SHELF SUPPORTS-8PCS
H1  FEET-4PCS	I1  MAT SLICES-8PCS	J1  SCREWS-3PCS
K1  SCREWS-16PCS	L1  SCREWS-28PCS	M1  DOWELS-2PCS
N1  SCREWS-28PCS	O1  SCREWS-2PCS	P1  SCREWS-24PCS
Q1  SMALL MAGNETS-2PCS	R1  HOOKS-4PCS	S1  HANGERS-4PCS
T1  PLASTIC BELTS-2PCS	U1  SCREWS-4PCS	V1  SCREWS-4PCS



NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

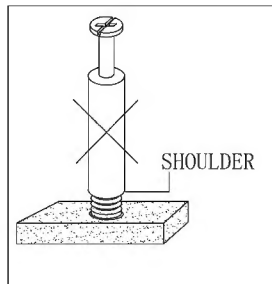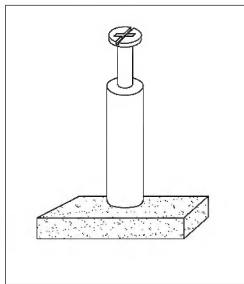


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

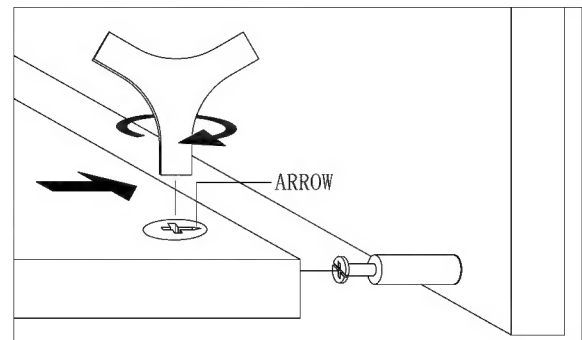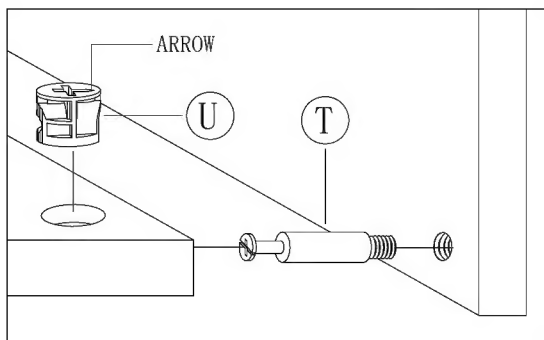


NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

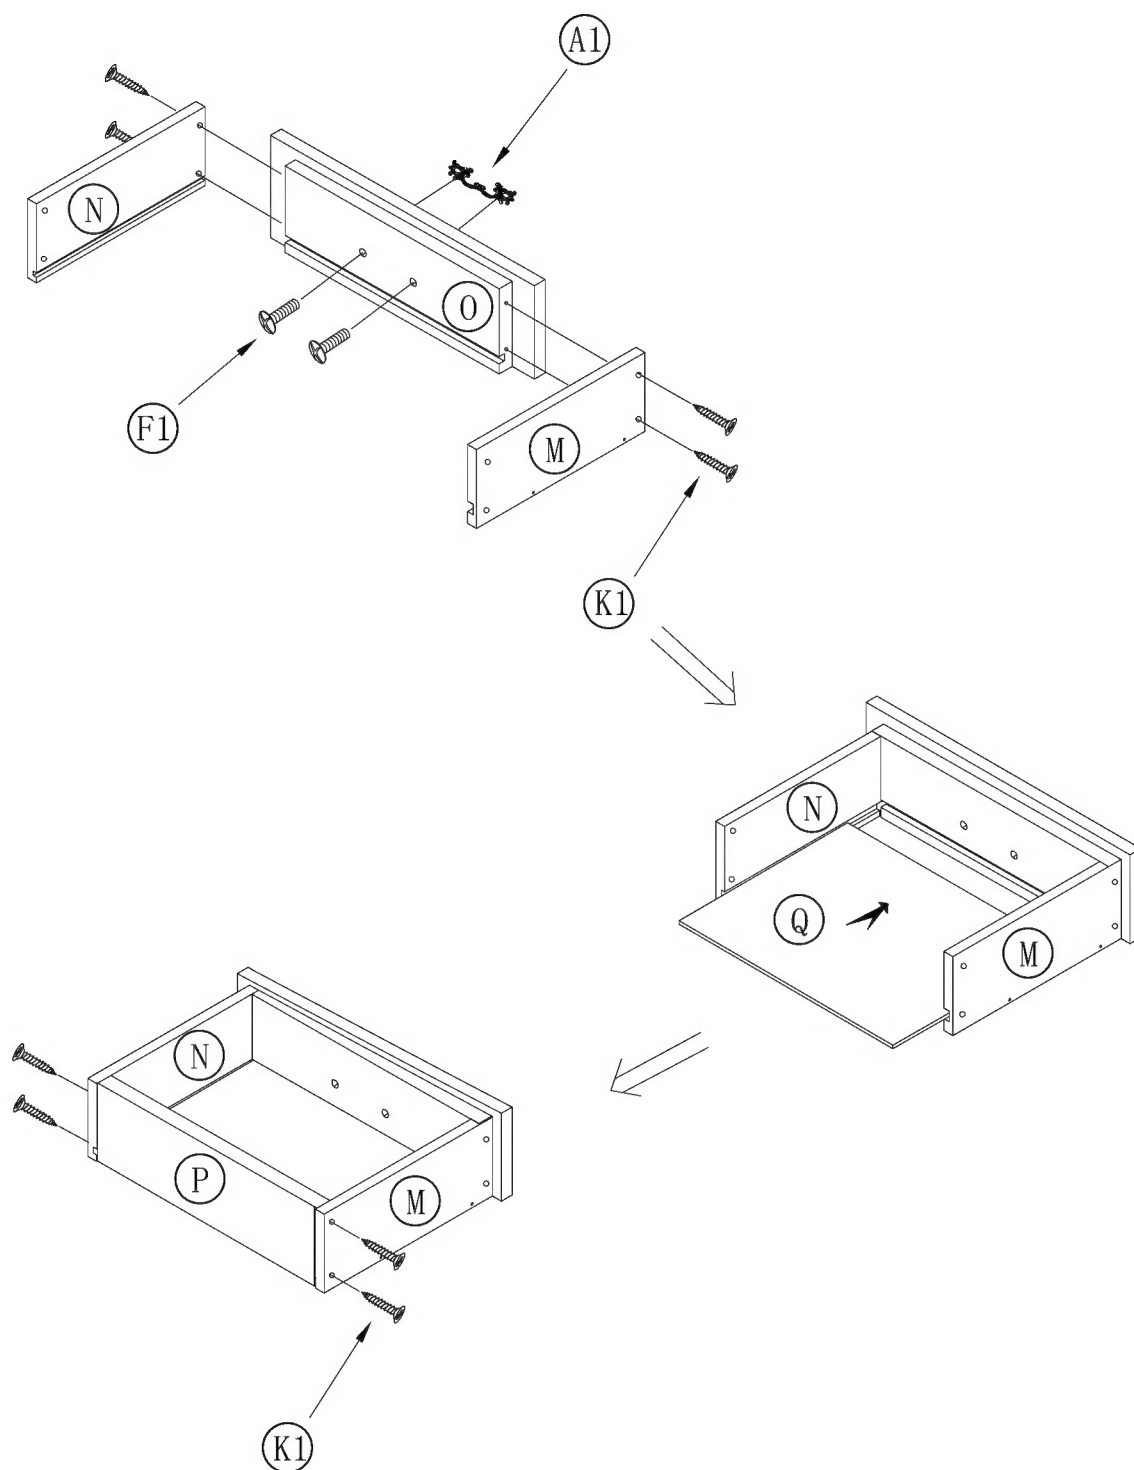


1). ASSEMBLE THE DRAWER.

- ATTACH DRAWER SIDE PANELS(M/N) USING 4 SCREWS(K1).
- ATTACH THE HANDLE(A1) TO DRAWER PANEL FRONT(O) USING 2 SCREWS(F1).
- INSERT THE DRAWER PANEL BOTTOM(Q) INTO THE SLOTS IN THE DRAWER PANEL SIDES(M/N).
- ATTACH DRAWER PANEL BACK(P) BETWEEN LEFT DRAWER PANEL SIDE(M) AND RIGHT DRAWER SIDE(N) USING 4 SCREWS(K1).

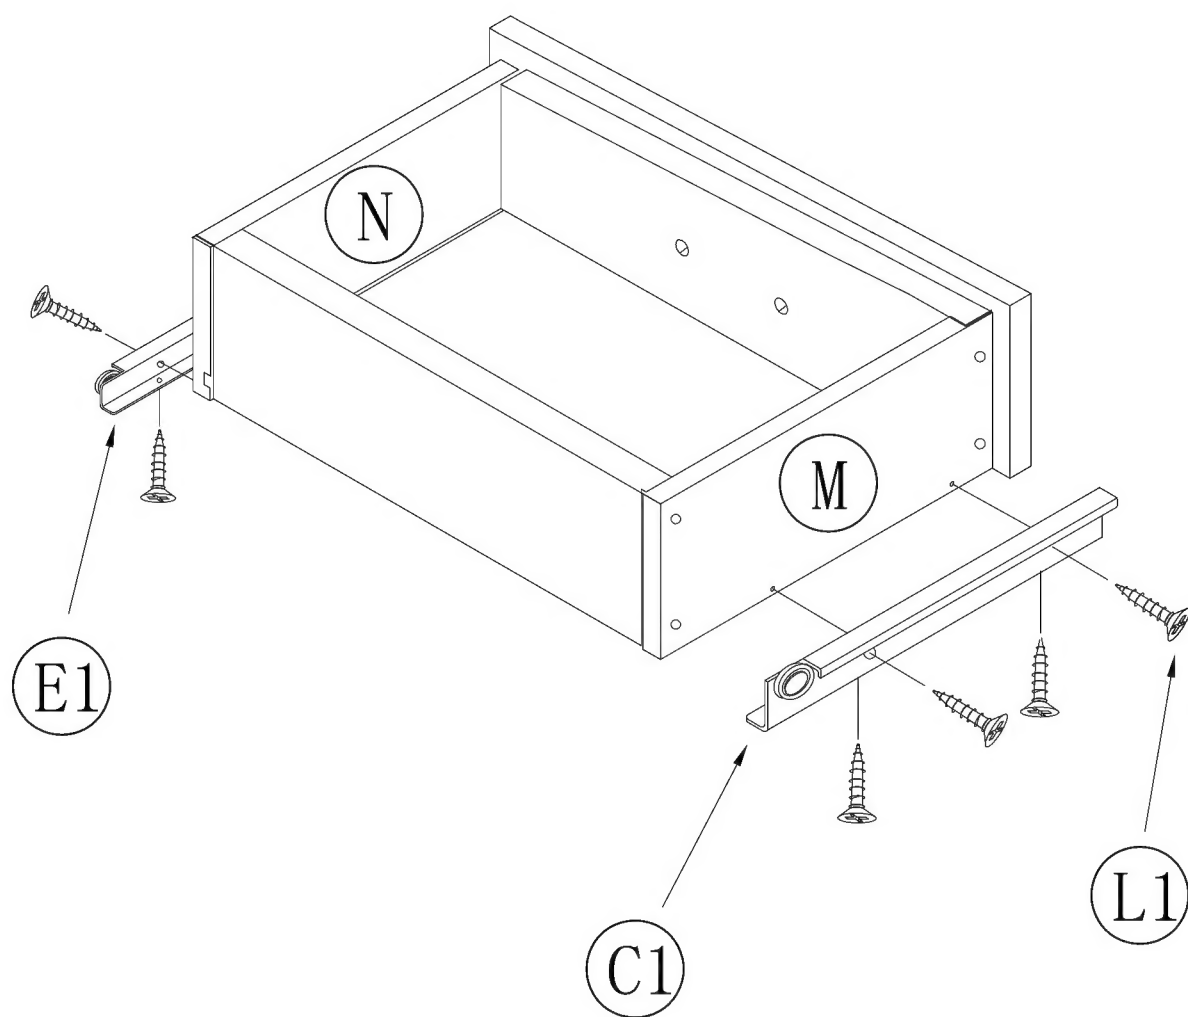


2). ASSEMBLE THE INNER SLIDES(C1/E1).

- ATTACH THE INNER SLIDES(C1/E1) TO DRAWER PANEL SIDES(M/N) USING 8 SCREWS(L1).

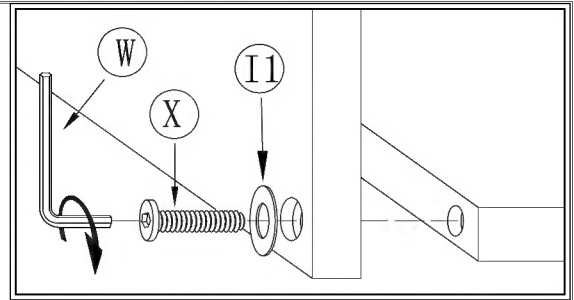


HOW TO USE THE ALLEN WRENCH

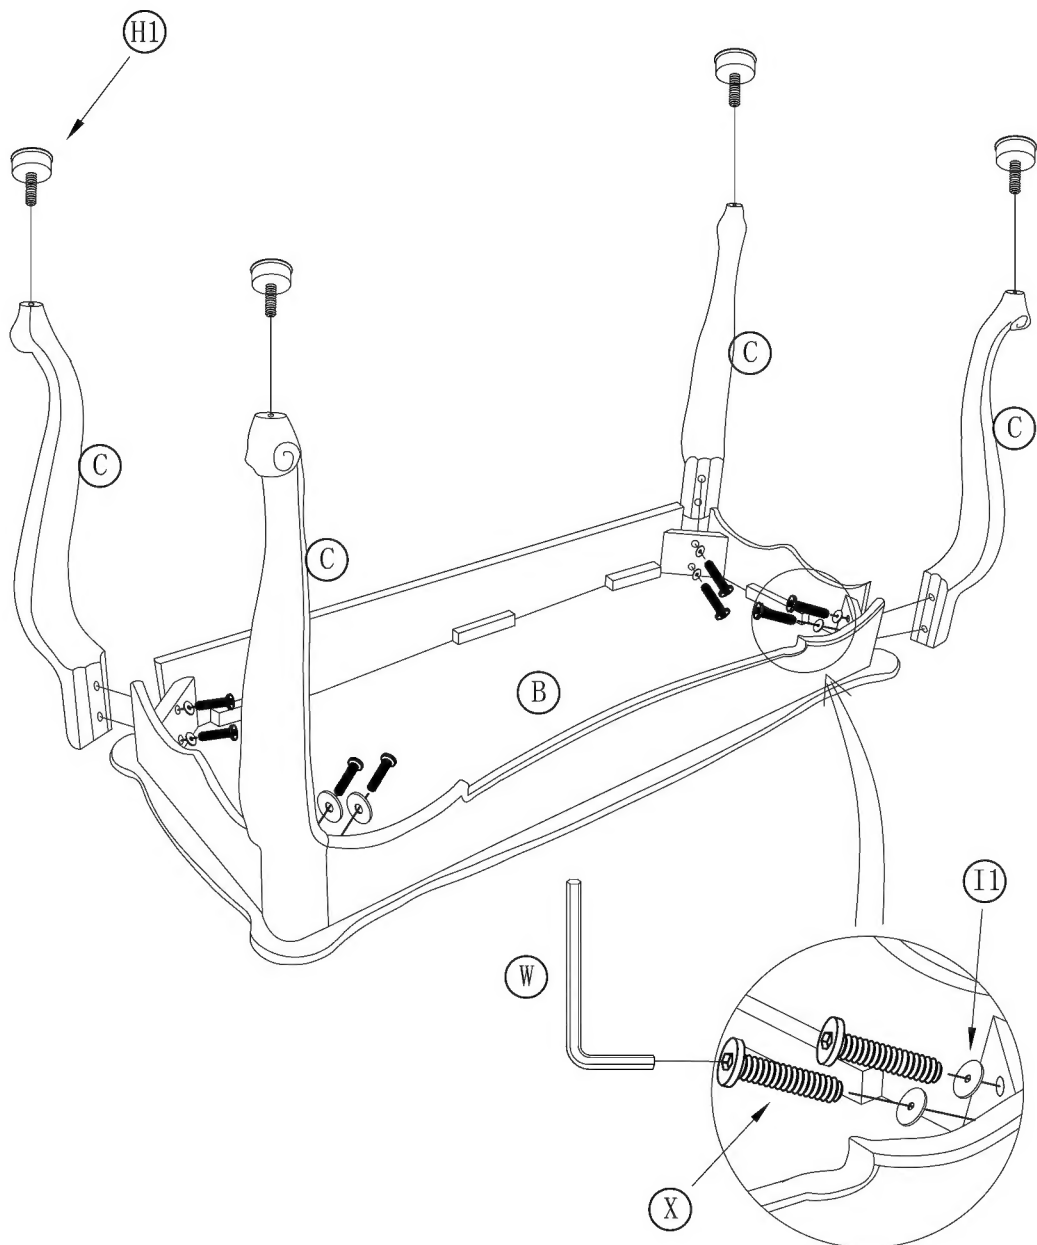


3). ASSEMBLE THE LEGS (C).

- ATTACH 4 LEGS (C) TO BOTTOM PANEL (B) USING 8 SCREWS (X) AND 8 MAT SLICES (I1).
- ROTATE THE FEET (H1) INTO THE HOLES IN THE LEGS (C).

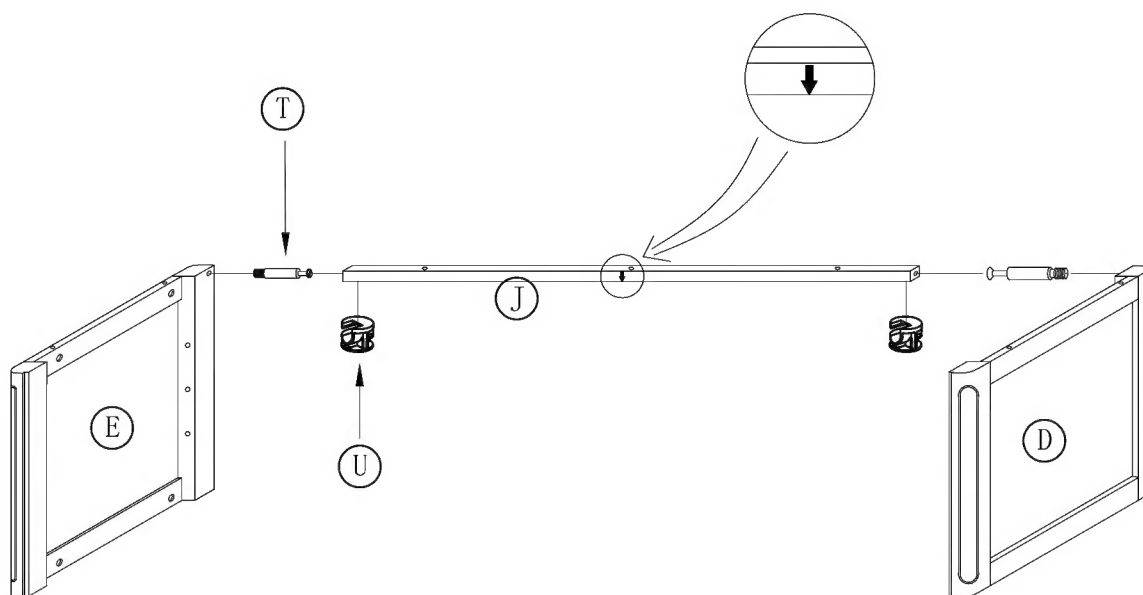


4). ASSEMBLE THE ADORNING PANEL (J).

- ROTATE THE 2 CAM-BOLTS(T) INTO THE HOLES IN THE SIDE PANEL(D/E).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE ADORNING PANEL(J) AND ATTACH USING 2 CAM-LOCKS(U).

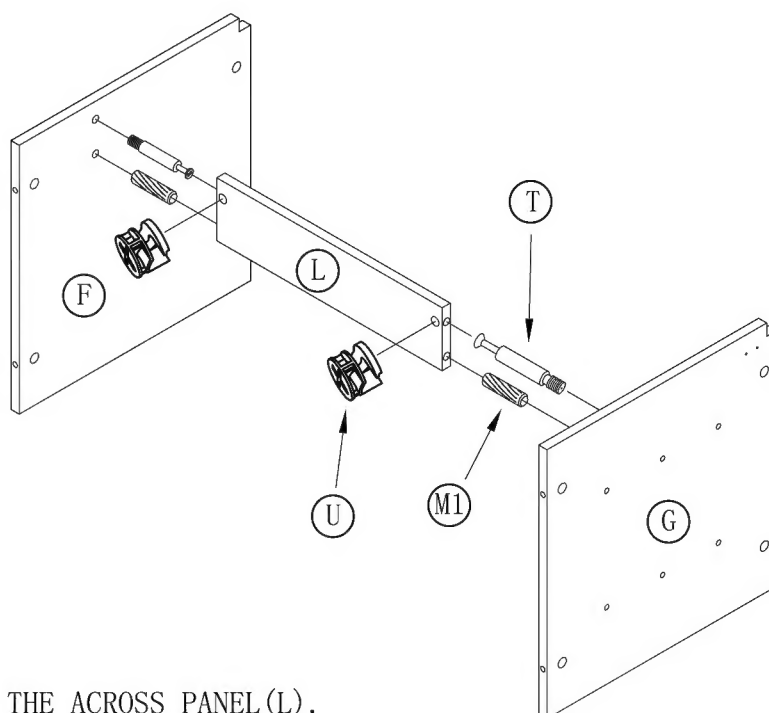



5). ASSEMBLE THE ACROSS PANEL (L).

- ROTATE THE 2 CAM-BOLTS(T) AND INSERT 2 DOWELS(M1) INTO THE HOLES IN THE STAND PANEL(F/G).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE ACROSS PANEL(L) AND ATTACH USING 2 CAM-LOCKS(U).

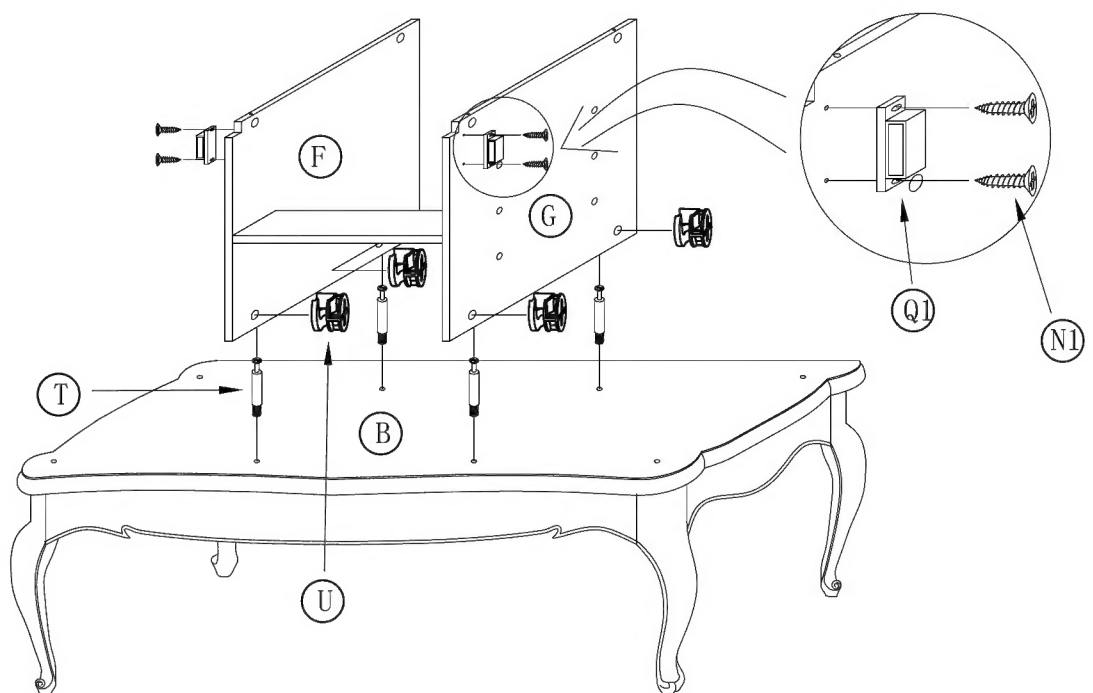


6). ASSEMBLE THE STAND PANEL(F/G).

- ROTATE THE 4 CAM-BOLTS(T) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE STAND PANEL(F/G) AND ATTACH USING 4 CAM-LOCKS(U).
- ATTACH THE 2 SMALL MAGNETS(Q1) TO STAND PANEL(F/G) USING 4 SCREWS(N1).

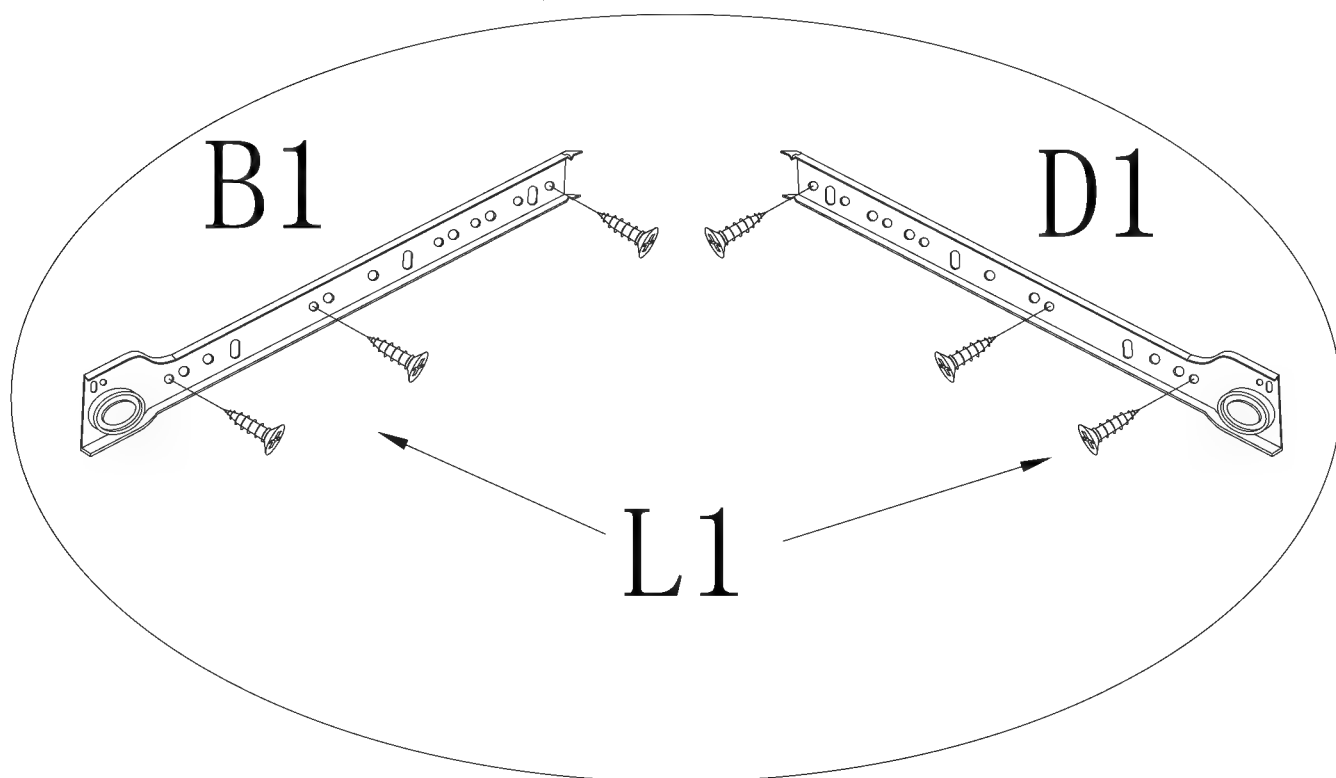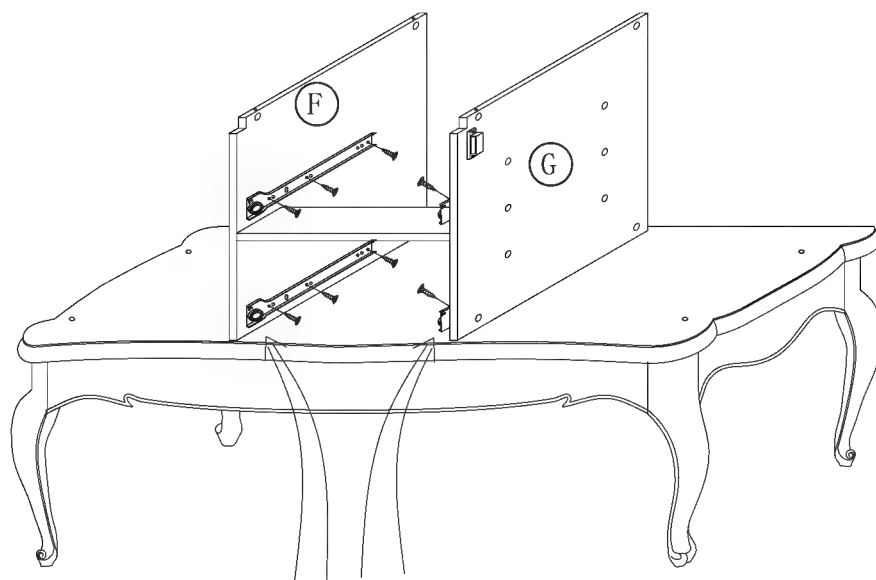


7). ASSEMBLE THE OUTER SLIDERS (B1/D1).

- ATTACH OUTER SLIDERS (B1/D1) TO PANELS (F/G) USING 12 SCREWS (L1).

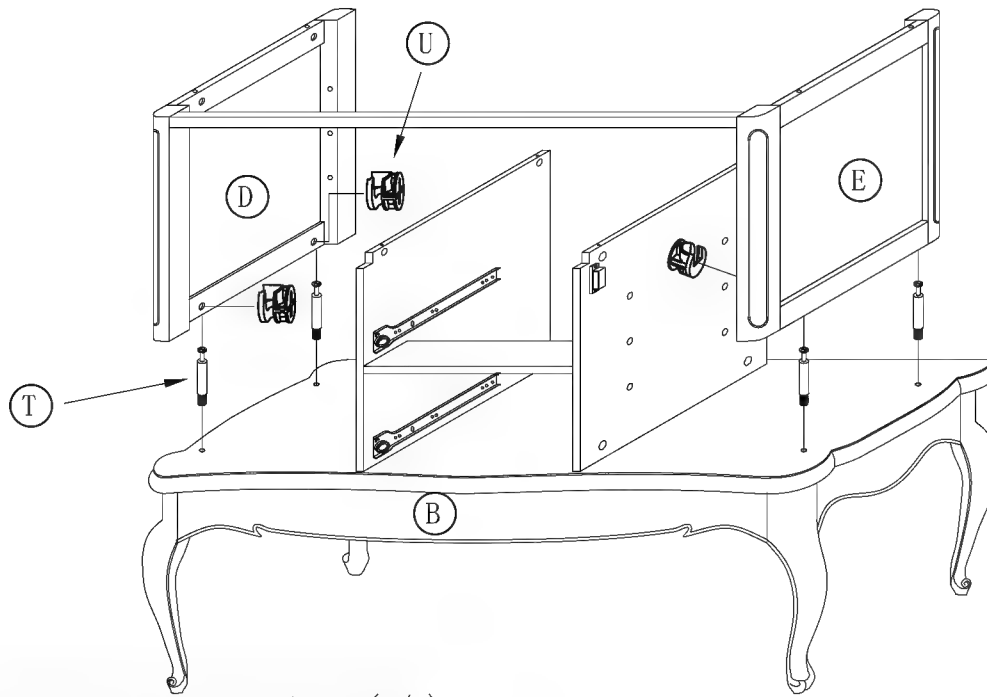


8). ASSEMBLE THE SIDE PANELS (D/E).

- ROTATE THE 4 CAM-BOLTS(T) INTO THE HOLES IN THE BOTTOM PANEL (B).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE SIDE PANEL (D/E) AND ATTACH USING 4 CAM LOCKS (U).

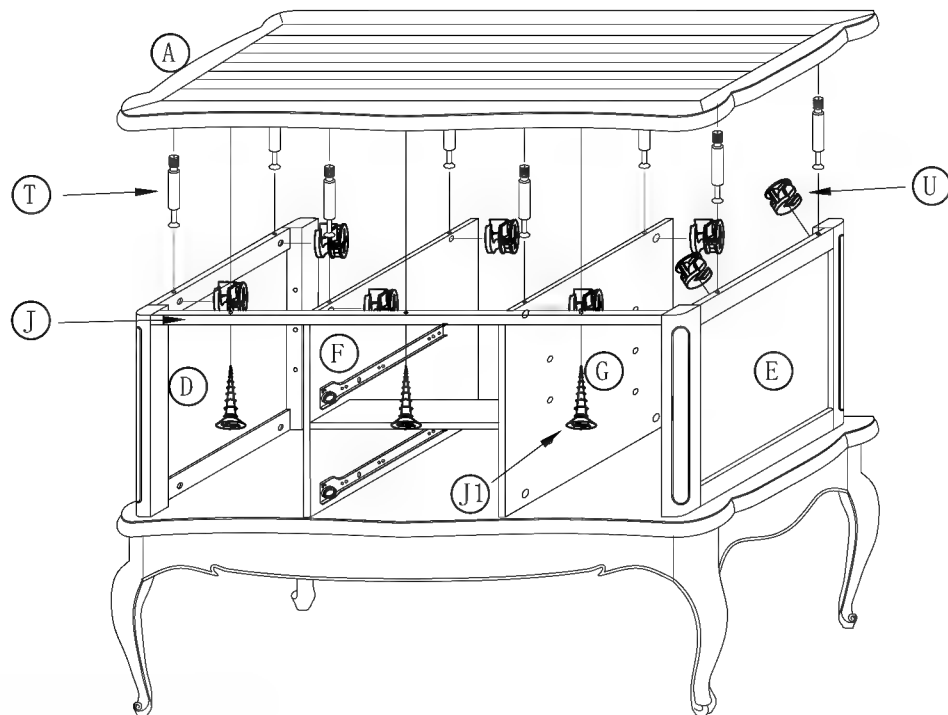


9). ASSEMBLE THE TOP PANEL (A).

- ROTATE THE 8 CAM-BOLTS(T) INTO THE HOLES IN THE TOP PANEL (A).
- PLACE CAM BOLTS(T) INTO THE HOLES IN THE PANEL (D/E/F/G) AND ATTACH USING 8 CAM LOCKS (U).
- ROTATE THE 3 SCREWS(J1) INTO THE HOLES IN THE ADORNING PANEL (J).

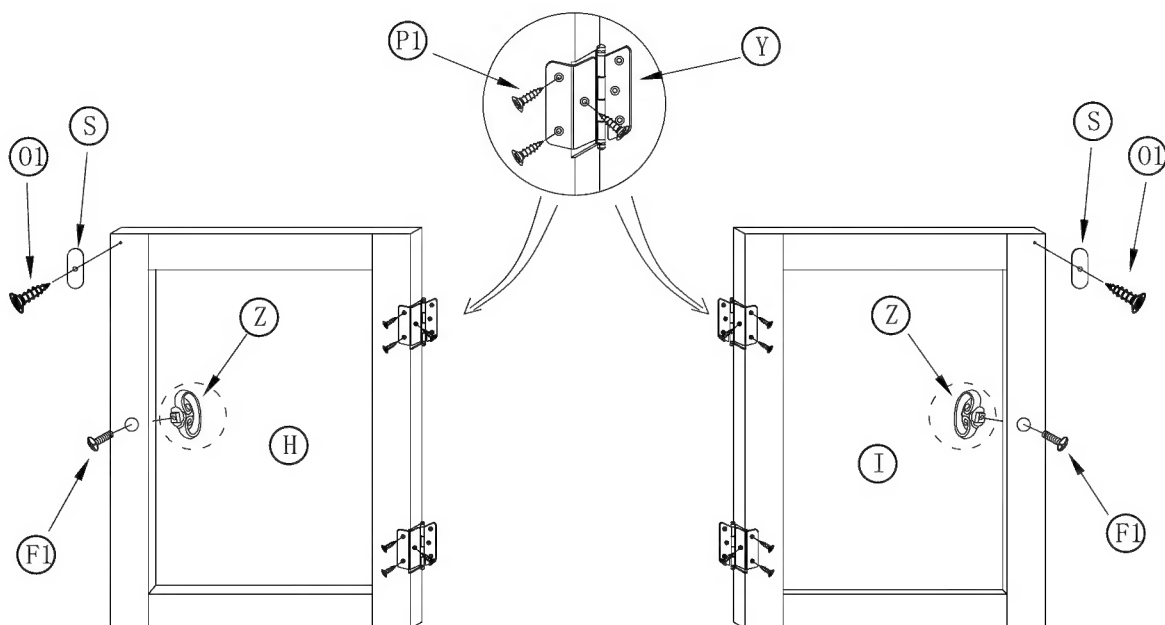


10). ASSEMBLE THE DOORS (H/I).

- ATTACH 2 HANDLES (Z) TO DOORS (H/I) USING 2 SCREWS (F1).
- ATTACH 2 FEMALE MAGNETS (S) TO DOORS (H/I) USING 2 SCREWS (O1).
- ATTACH 4 HINGES (Y) TO DOORS (H/I) USING 12 SCREWS (P1).

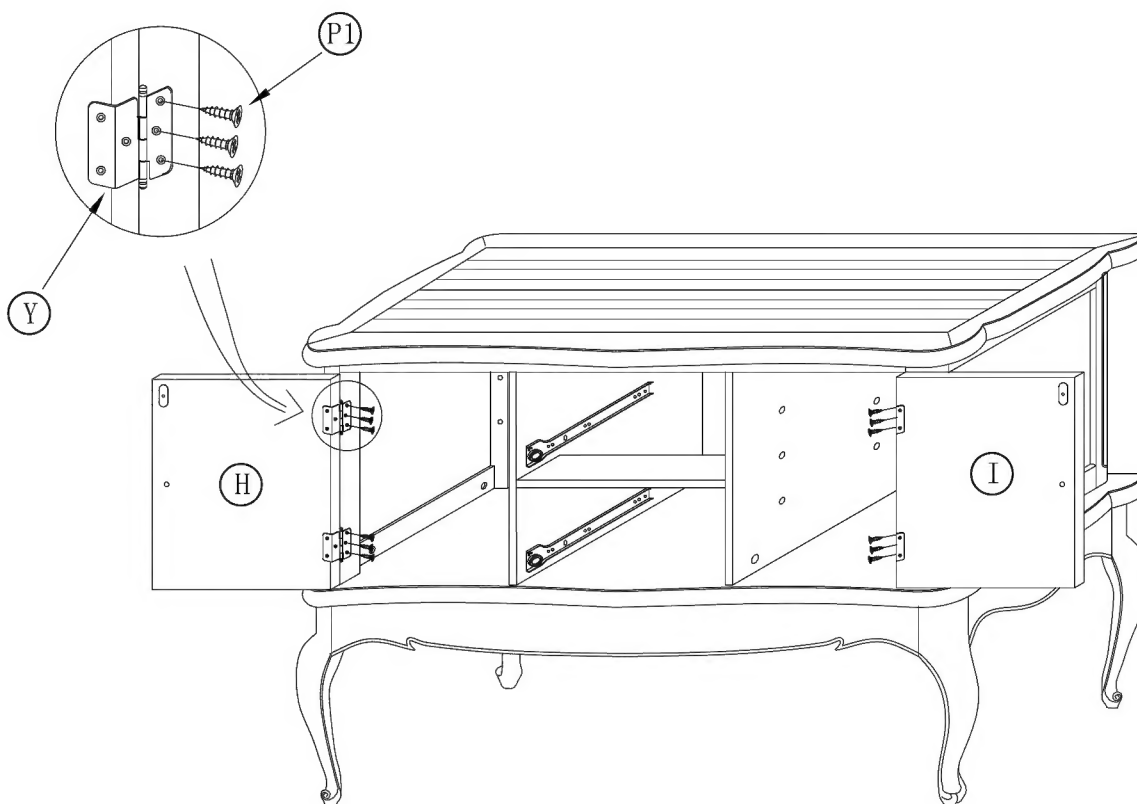


11). ASSEMBLE THE DOORS (H/I).

- ATTACH THE DOORS (H/I) TO SIDE PAENL (D/E) USING 12 SCREWS (P1).

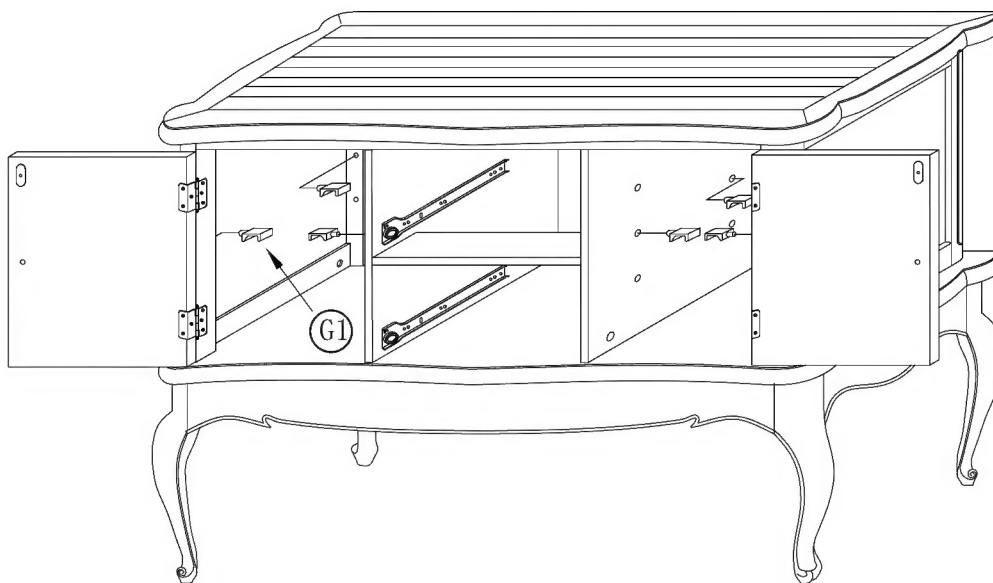

12). ASSEMBLE THE SHELF SUPPORTS (G1).

- INSERT 8 SHELF SUPPORTS (G1) INTO THE HOLES IN THE PANELS (D/E/F/G).

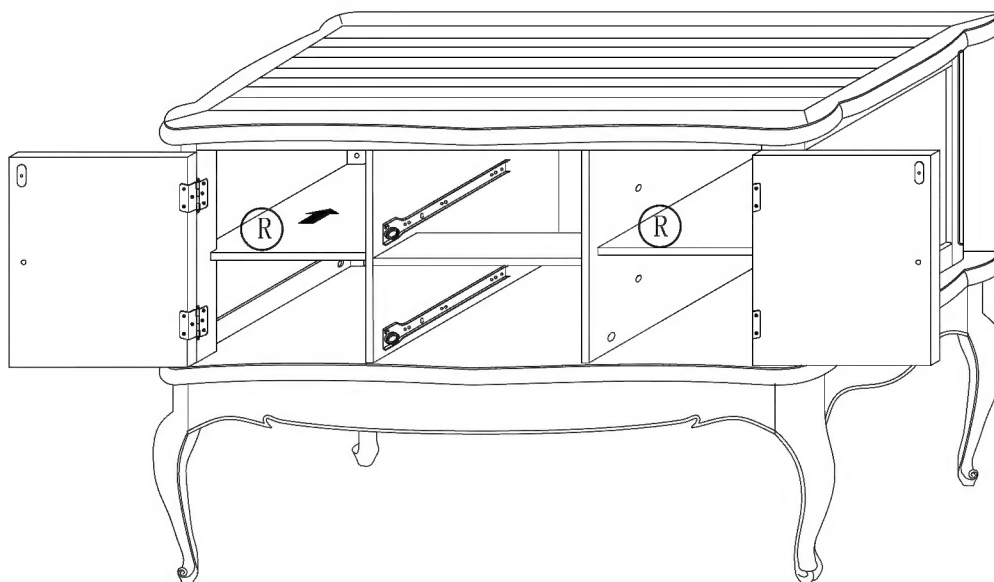


13). ASSEMBLE THE SHELVES (R).

- PLACE THE SHELVES (R) ONTO THE SHELF SUPPORTS (G1).




Warning

The anti-tip hardware must be used as part of assembly!

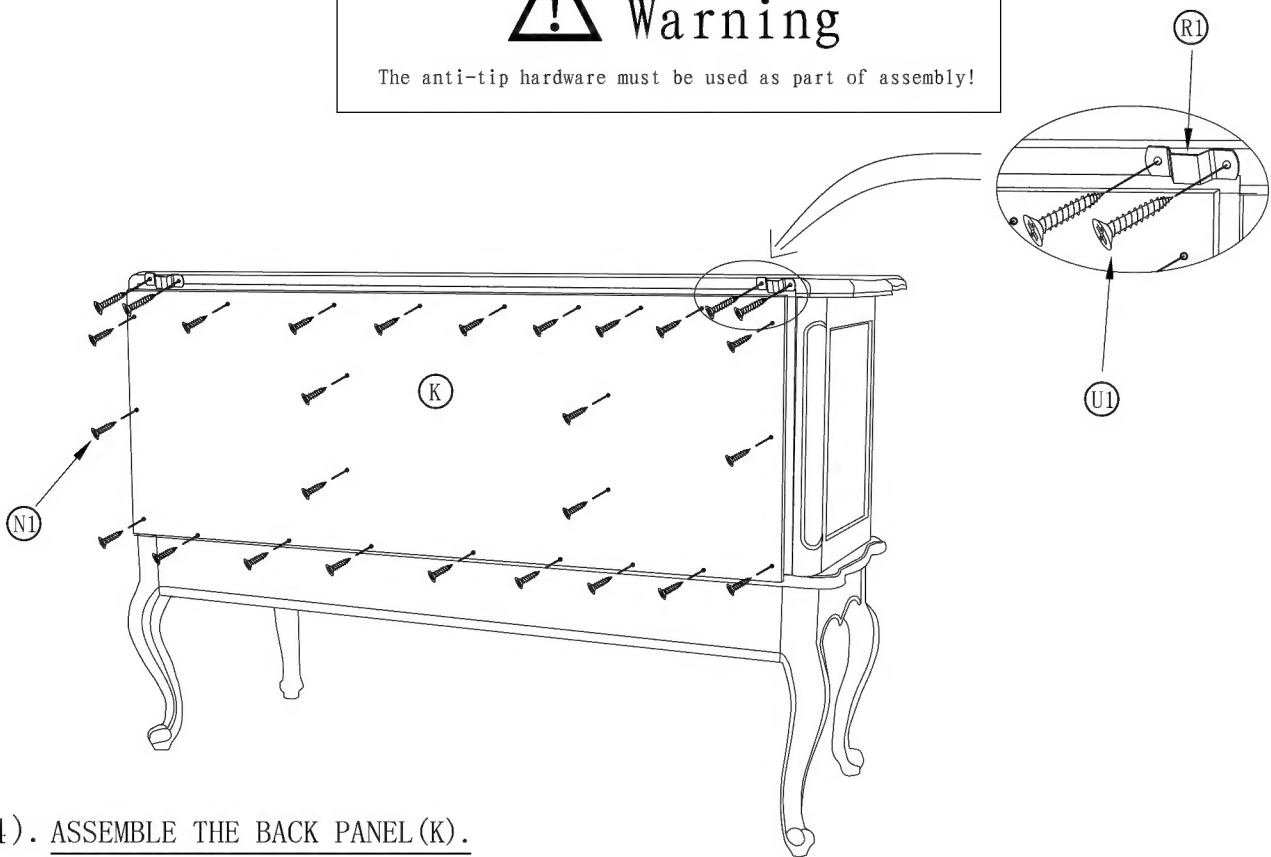


14). ASSEMBLE THE BACK PANEL (K).

- ATTACH THE BACK PANEL (K) USING 24 SCREWS (N1).
- ATTACH 2 HOOKS (R1) USING 4 SCREWS (U1) IN THE PREDRILLED HOLES OF REAR TOP PANEL.

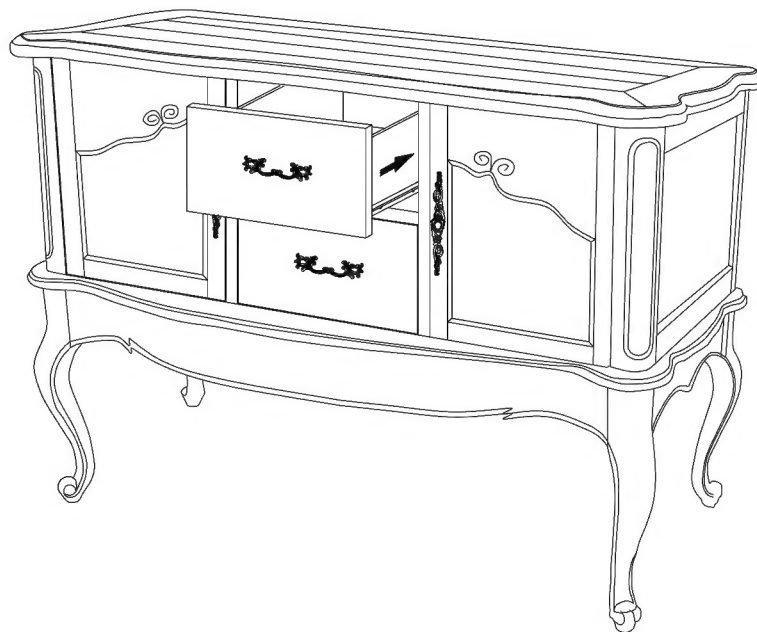

15). ASSEMBLE THE DRAWER.

- SLIDE THE DRAWER INTO SLIDERS.

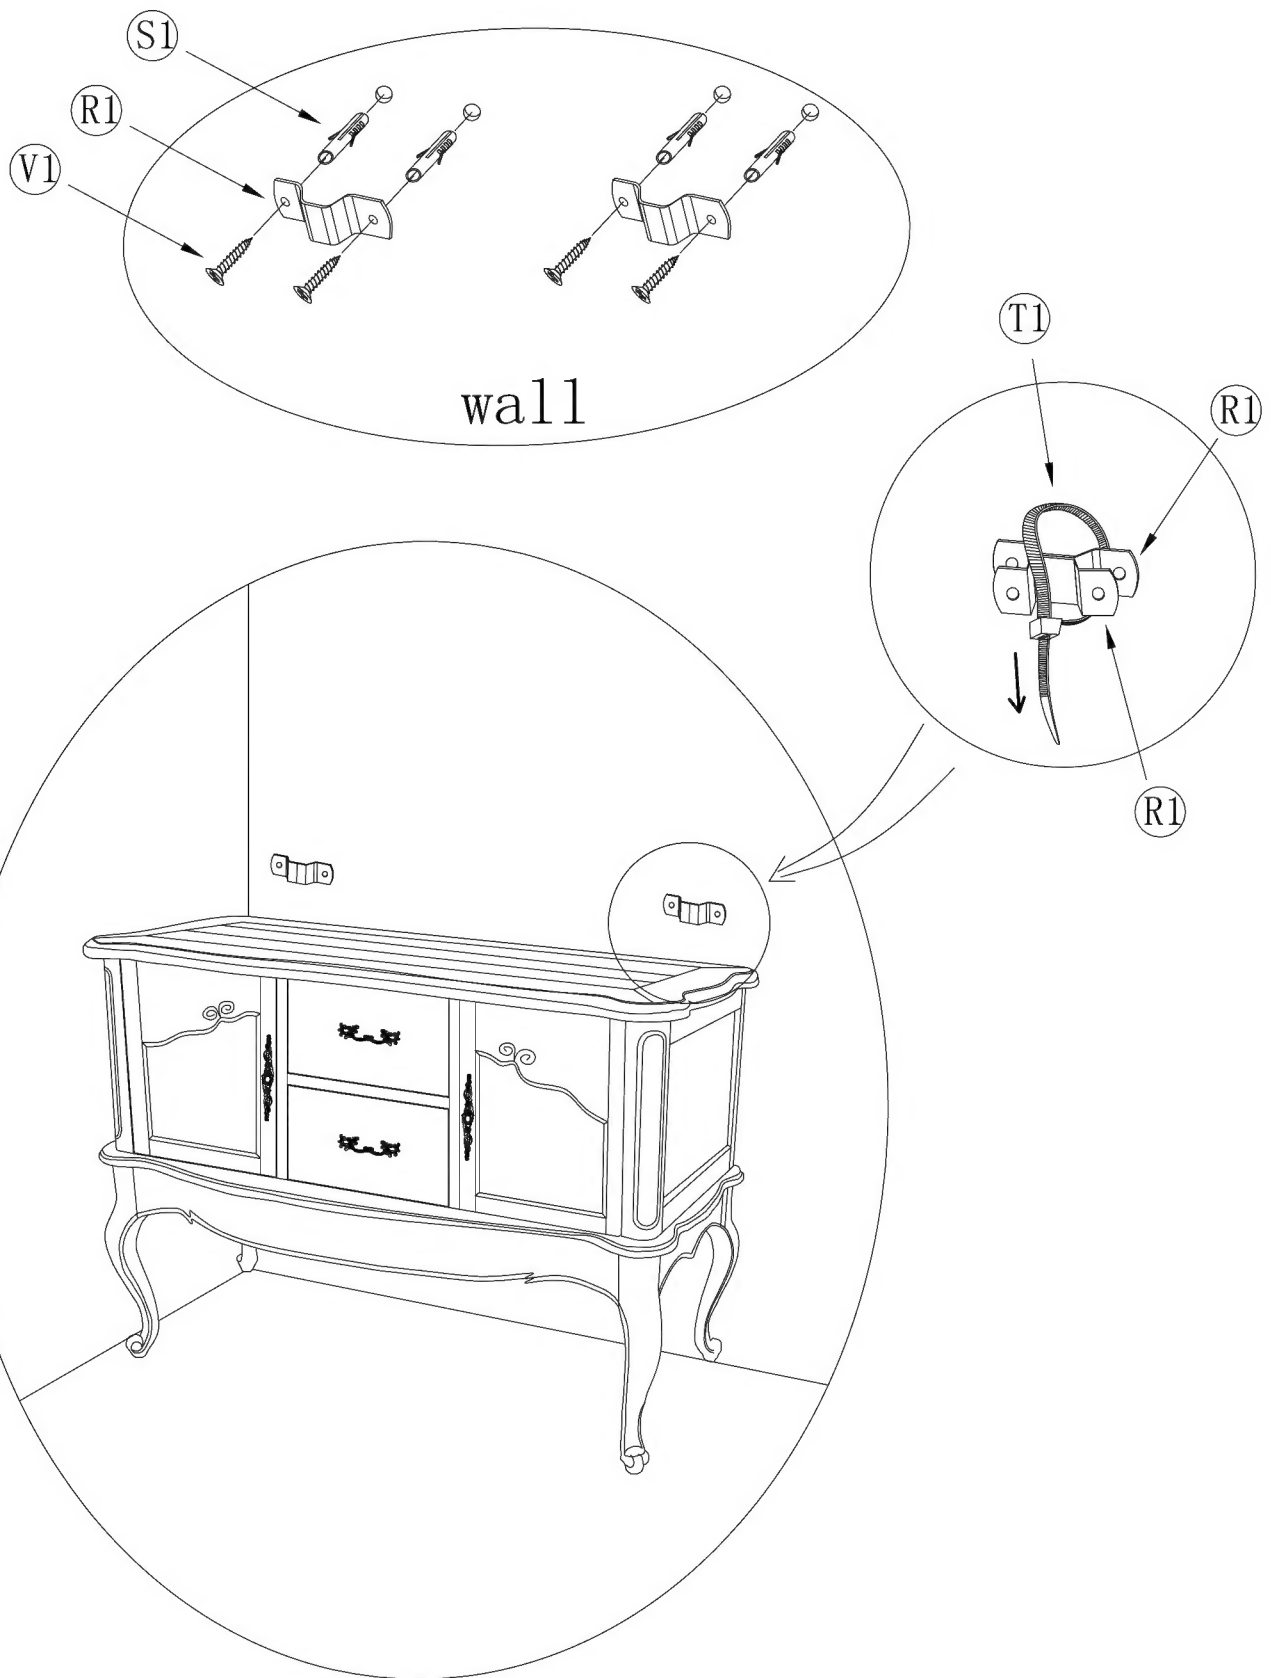

16). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 HANGERS(S1) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(V1) INTO THE HANGERS(S1).
- CONNECT THE TWO HOOKS WITH A PLASTIC BELT.